



ACCESSORY MOUNTS



COCKPIT MINI T




- 3.75in with No Hole
- 5in with Cable Hole

INSTALLATION AND ASSEMBLY

This Mini T is designed to attach to the end of a vertically oriented recumbent handlebar to provide a hand rest, a place to mount accessories, etc. The T plugs into the end of the handlebar and clamps to the outside end of the handlebar with a special double-ended clamp. Installation involves trimming the end of the handlebar grip, inserting the T, and clamping the T and handlebar together.

Tools Required

3mm Allen wrench
a sharp knife
masking tape
(or other removeable tape)

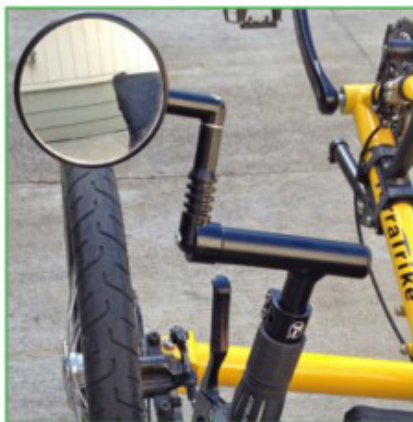

1. Trim the Handlebar Grip

Using your sharp knife, trim off enough of the grip to expose about 3/8" (10mm) of the handlebar. For a more precise and straight cut, use masking tape! Cutting through half way then using a rolling motion will also ensure a tidy cut.



2. Set the Insertion Depth

It is important that the T is plugged deep enough into the end of the handlebar. We recommend that it be inserted at least 1-3/8 inches (35mm) into the handlebar. Slide the clamp up on the T until the midpoint slot in the clamp is at least 1-3/8 inches (35mm) from the end of the T. Lightly tighten the upper bolt of the clamp to lock the clamp to the T.



3. Insert the T and Adjust

Slide the T down inside the end of the handlebar until the end of the handlebar seats firmly in the clamp. You should be able to see the end of the handlebar in the holes in the side of the clamp. Rotate the T into the position you would like, then loosen the upper clamp bolt and rotate the clamp into the position you'd like. Tighten both clamp bolts securely, to about 2.5 ft-lbs (3.5 N-m).



4. Check the Fit and Secure the T

Sit and turn the handlebars fully to ensure nothing snags. The T should not move, so adjust the T bar and clamp if needed.

The horizontal part of the T is 7/8 inch (22.2mm) tubing, the standard handlebar size, so you can mount accessories like lights, phone mounts, GPS, etc. The horizontal tube is hollow, so you can remove the end caps to attach mirrors, etc.

ENJOY YOUR NEW MINI T!



Cockpit Mini-T Assembly Instructions V2.1 2024
TerraCycle, Inc. 5726 SE Center St. Portland, OR 97206 USA info@t-cycle.com



Cockpit Mini-T Assembly Instructions V2.1 2024
TerraCycle, Inc. 5726 SE Center St. Portland, OR 97206 USA info@t-cycle.com

