

# TerraCycle™ Accessory Mount Kit Euro Style Light Mounting

## Installation and Setup Instructions

### Introduction


The standard TerraCycle Accessory Mount comes with a 30mm wide, 1" diameter tube, for lights, computers, etc. that are designed to attach to a handlebar. Euro style lights (B&M, Lumotec, E6, Union, etc) that are designed to bolt to a tab require this Euro Style Light Mounting kit. It adds an adjustable tab to the side of a standard Accessory Mount.

### Tools Required

You will need a 3mm Allen wrench for the light mount bolt, and an 8mm wrench or adjustable wrench for the light mount nut.

### Installation

Installation involves attaching the new mounting tab to the side of the Accessory Mount, then following the Installation Instructions for the standard mount to attach things to your bike. The assembly sequence looks like this:

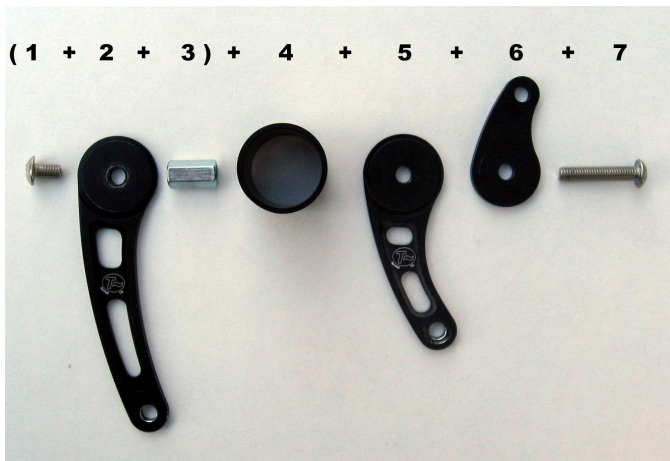

The Euro light mounting tab is part 6. Parts 1, 2, and 3 are fixed together, and then the other parts are attached. Parts 2 and 5 are curved and can be flipped around to work around obstacles.

Once the mount is assembled, each arm can be independently adjusted to put things wherever you need them:



The light itself can be attached to either side of the mounting tab, but usually, it's mounted towards the inside:



**Note:** Some lights will require a separate ground connector because the Accessory Mount is electrically isolated from the bike by the plastic Cateye clamps. Put the ground connector next to the light, on the bolt that holds the light itself.

That's it! May you ride safely illuminated for years and years!