

TerraCycle

Recumbent Cycling Essentials

Handlebar Accessory Mount



101mm straight mounting arm

45x45mm elbow mounting arm

Installation Instructions

This mount consists of two parts: a clamp, and a tube to mount accessories on.

The clamp is designed to be small, so it can fit all sorts of places. The tube can be straight or L shaped. If you have an L shaped tube, you will need to adjust the rotation of the L as well as the position of the clamp on the handlebars.



Tools Required

You will need 4mm and 5mm Allen (hex) wrenches.

Assembly

1. Figure out where you'd like to put it. The clamp requires about 1/2 inch (12.7mm) of **straight** handlebar (7/8in OD) tube to clamp onto. This can usually be found below the brake mount, in between the brake mount and the shifter, or even by pushing up the grip slightly to expose a little bit of handlebar.



2. Once you've found your location, remove the two bolts from the clamp arch using the 4mm Allen wrench.


3. Test fit the clamp where you'd like it to go. If you have an L shaped Accessory Mounting tube, you may want to rotate the L to adjust the angle. When the angle is where you want it, tighten the 6mm wedge bolt with the 5mm Allen wrench.



4. Install the mount. Tighten the clamp arch bolts **alternately and evenly**. As the bolts take tension, adjust the mount to your desired position.

Once the mount is in place, you can attach accessories like lights, phones, motor controllers, mirrors, etc.

Note that while the mount is strong, it is designed for mounting lightweight accessories and is **not intended for steering, hand grips, or other heavy loads.**

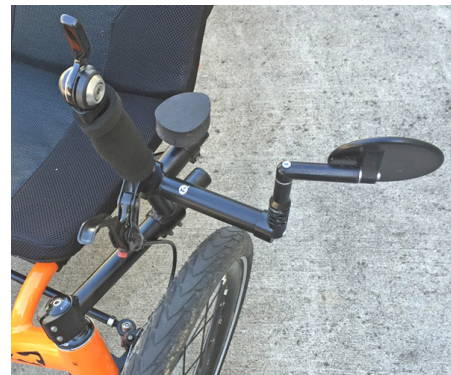

Enjoy riding with your accessories right where you want them!

