


MetaPhysic Idler Kit

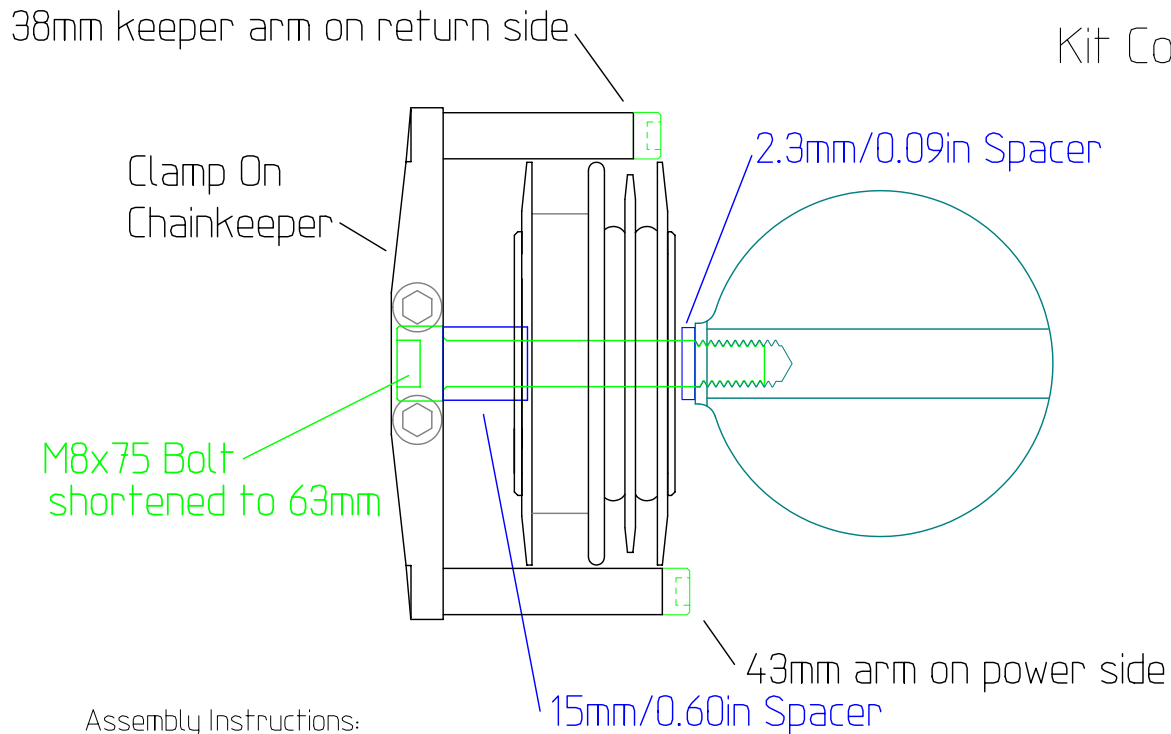

Kit Contents:

Over/Under Idler

M8x75 Bolt, threads shortened to 13mm

0.60in/15mm Outer Spacer

0.09in/2.3mm Inner Spacer

Double Sided Clamp on Chainkeeper

$33+5 = 38\text{mm}$ Top Arm

$38+5 = 43\text{mm}$ Lower Arm

Assembly Instructions:

1. Remove old idler and chainkeeper
2. Loosen pinch bolts and remove chainkeeper from M8x75 bolt
3. Install idler and spacers onto bolt as shown
(15mm/0.6in spacer, idler, 2.3mm/0.09in spacer)
4. Thread idler bolt all the way into mount on bike
5. Place power chain under cog, return chain over grey return side
6. Reinstall chainkeeper, adjust inner face even with inner face of bolt

TerraCycle, Inc.

www.t-cycle.com info@t-cycle.com

European Union: www.icletta.com

MetaPhysic Idler Kit V1.00