

Multi-Purpose Accessory Mount 15mm Side Extender Kit



Contents:

- Extender Mount Tube
- Fitted Cap
- m5x40 Button Head Bolt



Installation Instructions

This kit Extender Kit attaches to a standard Accessory Mount. It provides a second 15mm wide accessory mounting location on the side of the standard Accessory Mount. This extender kit consists of a cylindrical mount tube, a cap, and a longer button head bolt.

Tools Required

You will need a 3mm allen wrench to tighten the M5 button head bolts on the Mount and extender. If you have already installed the standard mount on your bike, you will need a 4mm allen to remove and reinstall the M5 Cateye attachment clamp bolts.

Assembly

Installation involves disassembling the Mount and reassembling it with the new parts. When you're done, you will have a leftover 25mm button head bolt.

1. Disassemble the Mount by removing the button head bolts. Remove both bolts using the 3mm allen wrench.

2. Decide which side you want the extender on. If you're putting the Mount on the front derailleur tube of a recumbent, you will probably want the extender on the left side of the Mount to keep things away from the chainrings. In any other application, it all depends on what you're mounting and where you'd like it.

3. Reassemble, starting from the non extender side. Attach the coupler nut on the inside face of the non extender side arm using the short (8mm long) button head bolt. See Fig. 1.

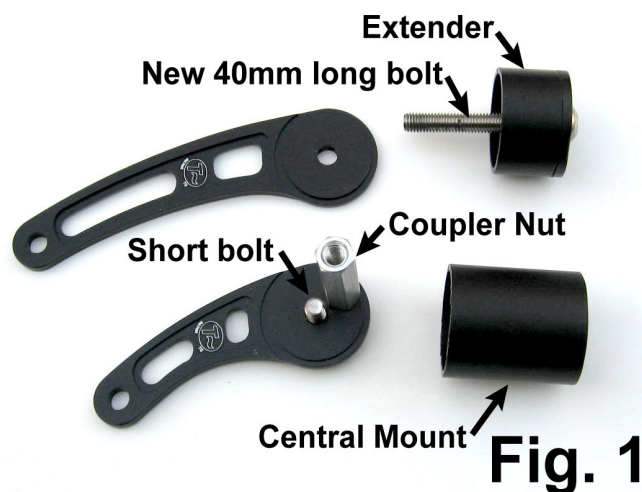


Fig. 1

4. Put the rest of the parts back on. Once the coupler nut is on, add the main mount tube, then the other arm, followed by the extender tube, cap, and the 40mm long bolt. Note that one face of the cap has a rim that locks into the extender tube. Make sure the rim is inserted into the extender tube. When you're done, it should look like Fig. 2.



Fig. 2

5. Attach the Mount to the bike using the Installation Instructions.

Use the Installation Instructions from the standard Mount to help install/reinstall the Mount on your bike.

Double Extender Installation

You can install two extenders at the same time. The process is almost the same as installing one. First, disassemble as in Step 1. Instead of attaching the coupler nut as in Step 3, use the 25mm button head bolt to attach the first extender to one of the arms using the coupler nut. Essentially, use the 25mm bolt and one of the extenders in place of the 8mm button head bolt. Finish reassembling as described in Step 4. The results should look like Fig. 3.



Fig. 3