



Windwrap® Light/Mirror Mounts for WINTR Fairings




Installation Instructions

These instructions show how to install the Light/Mirror mounts on the Windwrap WINTR fairing. The mounts are special short bar ends at the right angle for the ends of the upper T bar of the fairing mount.

Tools Required

You will need a 5mm Allen wrench.

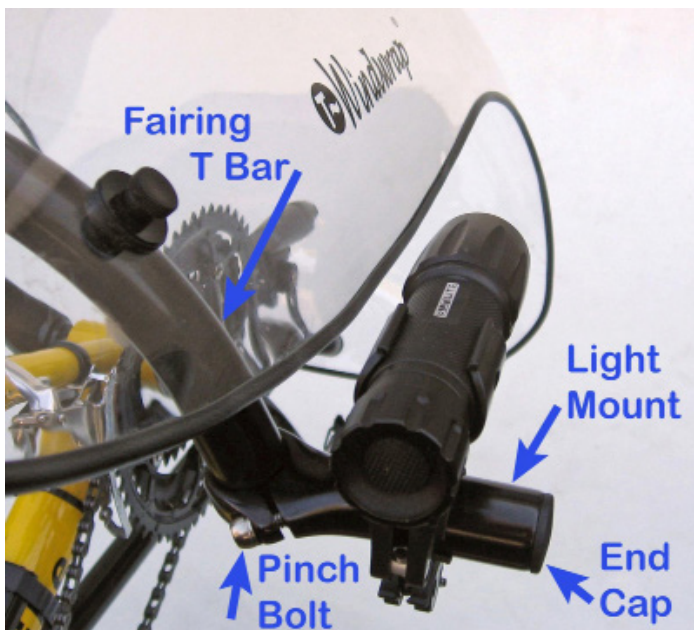

Assembly

Installation involves attaching the bar end mounts and adjusting their positioning.

1. Loosen the pinch bolts and slide mounts into place. Loosen the pinch bolts with the 5mm allen wrench. The bar ends are a left/right pair. Place them on the ends of the T bar tube so that the pinch bolts are face back. Slide them up until they are even with the end of the tube.

2. Adjust the mounts. Rotate the mounts around until they are level and perpendicular to the main tube of your bike/trike.

When you have them positioned where you want them, tighten the clamps fully.

3. Attach your lights, mirror, and whatever else you'd like (computer, etc.). The tube is 7/8 inch (22.2mm), the standard handlebar grip size. You can remove the end caps to install mirrors if you wish.

Once things are where you want them and all tightened up, go for a test ride. Stop periodically and check to see that everything is still tight and still in place.

That's it! May you enjoy years and years of riding with your new mounts!

